Replace the filters yourself in about 10 minutes


Flexit UNI 2

2 × F7 filter
supply and extract

335×130×113 mm
size of both filters


2× a year
recommended interval

1 Where are the filters?

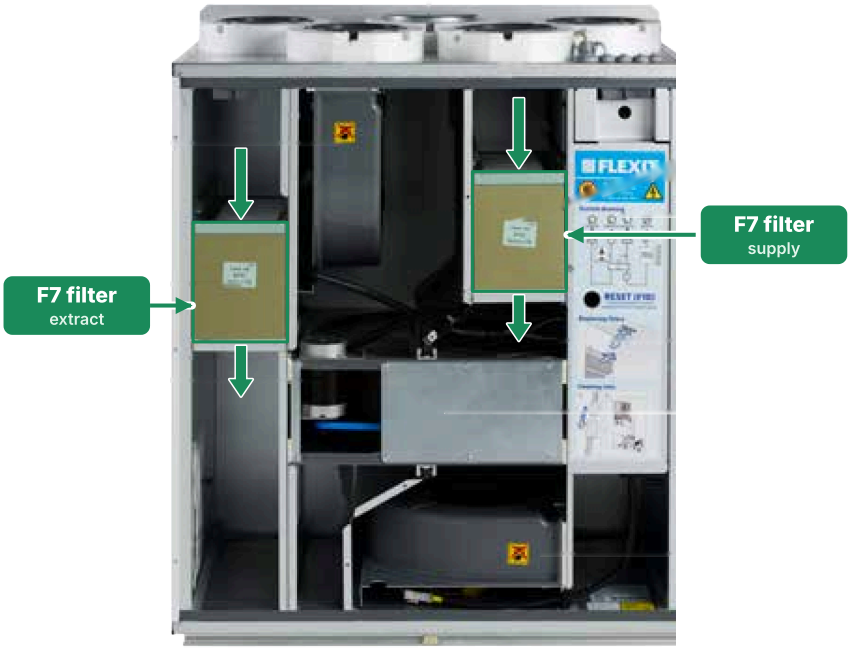

Unit seen from the front, door open. The drawing shows the right-hand model: extract filter on the left, supply filter at the top right. On the left-hand model the sides are swapped, but the filters are identical. The green arrows show the airflow: from the top down through the filter.

2 Most important: the arrow on the filter

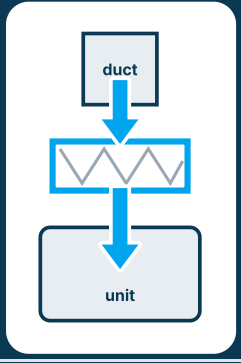

In this unit the air moves from the top down. So the arrow on the filter must point DOWN ↓

Both filters are F7 and identical, but the arrow on both must point down. The arrow shows which way the air goes through the filter. A filter fitted the wrong way round does not clean the air properly.

3 Right way and wrong way



Right
Arrow points down, into the unit



Wrong
Arrow points up, filter upside down

4 Replacing the filters step by step

1

Switch the unit off

Switch the unit off and unplug it. Wait 2 minutes until the fans have stopped.

2

Open the door

Open the unit door.

3

Take out the old filters

Pull both filters out of their slots.

4

Find the arrow on the new filter

Turn the filter so that the arrow points DOWN. Check that the seal is intact.

5

Slide the new filters in

Both are F7: supply and extract use the same filter. Push them all the way in so that no air leaks past.

6

Close the door and switch on

Close the door, plug the unit back in and switch it on. Done!

How often to replace?
We recommend replacing them twice a year, in spring and autumn. The manufacturer's minimum is once a year.

Replace both together
Always replace the supply and extract filters together. Do not run the unit without a filter.

Anything unclear?
Contact us and we will help you find the right filter: filt.ee

Old filter
Put it in a plastic bag and dispose of it with household waste.