Replace the filters yourself in about 10 minutes


Flexit UNI 4

2 × F7 filter
supply and extract

207×459×31 mm
size of both filters


2× a year
recommended interval

1 Where are the filters?

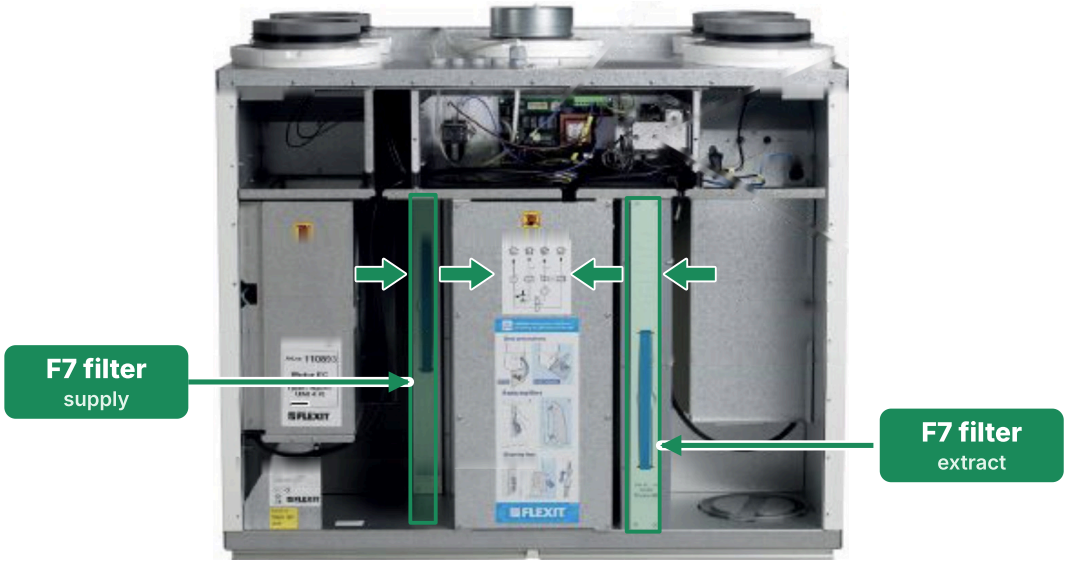

Unit seen from the front, door open. The drawing shows the left-hand model: supply filter on the left, extract filter on the right (blue handles). On the right-hand model it is the other way round, but the filters are identical. The arrows show the air moving towards the rotor.

2 Most important: the arrow on the filter

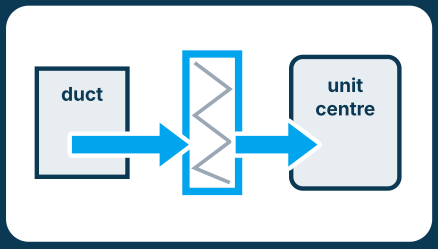

The air moves through the filter towards the rotor.
So the arrow on the filter must point TOWARDS THE ROTOR

The filters stand upright next to the rotor (with a blue handle): the arrow on the left filter points right, the arrow on the right filter points left. The arrow shows which way the air goes through the filter. A filter fitted the wrong way round does not clean the air properly.

3 Right way and wrong way

outside  to centre

Right
Arrow points towards the rotor

outside  to centre

Wrong
Arrow points away from the rotor

4 Replacing the filters step by step

1 Switch the unit off

Switch off the heating and let the fans run for 3 minutes. Then unplug the unit and wait 2 minutes.

2 Open the door

Open the unit door (see chapter 2 of the user manual for your installation type).

3 Take out the filter cassette

Grab the blue handle and pull out the filter cassette. Push the old filter out of the cassette.

4 Find the arrow on the new filter

Put the new filter in the cassette so that the arrow points TOWARDS THE ROTOR: right on the left side, left on the right side. Push the filter by its edge.

5 Slide the cassette back in

Both are F7: supply and extract use the same filter. Push the cassette all the way in so that no air leaks past.

6 Close the door and switch on

Check that the rotor turns. Close the door, plug the unit back in and switch it on.

How often to replace?
We recommend replacing them twice a year, in spring and autumn. The manufacturer's minimum is once a year.

Replace both together
Always replace the supply and extract filters together. Do not run the unit without a filter.

Anything unclear?
Contact us and we will help you find the right filter: filt.ee

Old filter
Put it in a plastic bag and dispose of it with household waste.