Replace the filters yourself in about 10 minutes


Vallox 101 MC | MV


1 × F7 filter
350×220×48 mm, supply

2 × G4 filter cloth
350×220 + 335×170

2× a year
recommended interval

1 Where are the filters?

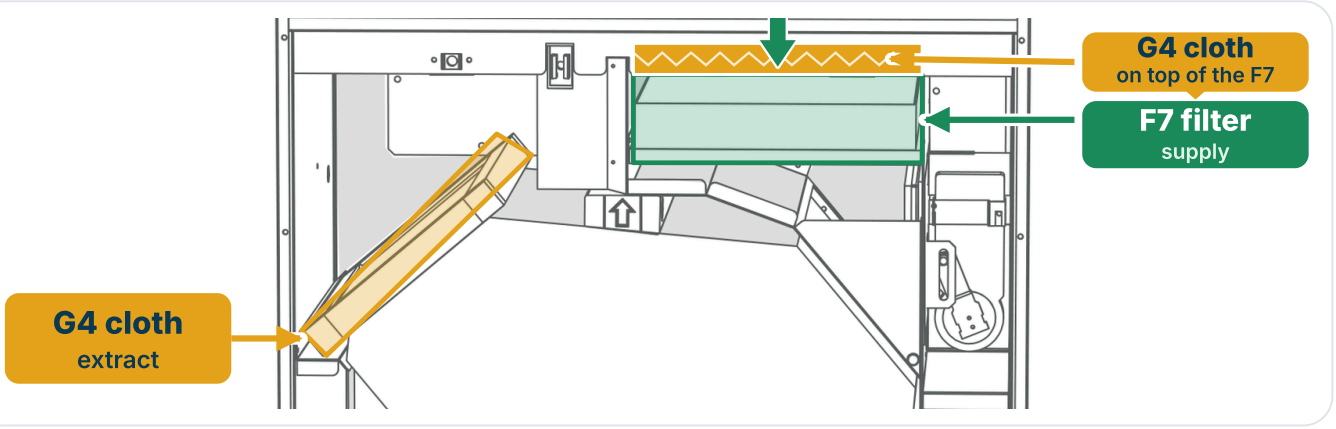




The G4 cloth goes on top of the F7 filter

Lay the new cloth flat and smooth on the side of the F7 filter where the air comes in (the yellow strip in the drawing). Then slide the F7 filter back in together with the cloth.

Unit seen from the front, door removed. Green: F7 filter; the yellow strip on it is the supply G4 cloth. Separate yellow: the extract G4 cloth. The drawing shows the right-hand model (R); on the left-hand model (L) everything is mirrored.

2 Most important: the arrow on the F7 filter

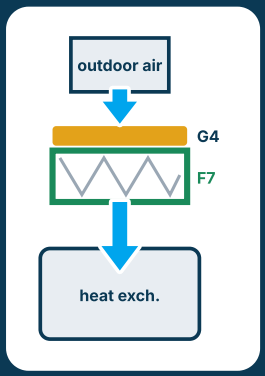

Outdoor air comes in at the top and moves down. The arrow on the F7 filter must point DOWN ↓

The air first passes through the G4 cloth, then through the F7 filter and on down into the heat exchanger. The arrow shows which way the air goes through the filter. A filter fitted the wrong way round does not clean the air properly.

3 Right way and wrong way



Right
F7 arrow points down, into the unit, cloth on top



Wrong
Arrow reversed, filter the wrong way round

4 Replacing the filters step by step

1 Switch the unit off

Unplug the unit. The door also has a safety switch, but the power must be off before any maintenance.

2 Open the door

Undo the thumbscrews on the door and lift the door off. Careful, the door is heavy!

3 Take out the old filters

Pull out the F7 filter together with the G4 cloth on top of it, then the extract G4 cloth. First check where the arrow on the old F7 filter points.

4 Find the arrow on the new F7 filter

Turn the F7 filter so that the arrow points **DOWN, INTO THE UNIT**. Check that the seal is intact.

5 Fit the new filters

Lay the new G4 cloth flat and smooth on top of the F7 filter (on the side where the air comes in) and push the F7 all the way in. Fit the extract G4 cloth in its place.

6 Close the door and switch on

Close the door properly (the safety switch must close), plug the unit back in and reset the service reminder on the control panel. Done!

How often to replace?
We recommend replacing them twice a year, in spring and autumn. The manufacturer's minimum is once a year.

Replace all three together
The set contains one F7 filter and two G4 filter cloths. Always replace them all at once. Do not run the unit without filters.

Anything unclear?
Contact us and we will help you find the right filter: filt.ee

Old filter
Put it in a plastic bag and dispose of it with household waste.